


# UŽIVATELSKÉ NASTAVENÍ

TERMOSTAT STC 200, Dixell XR20CX:

obrázek 1A

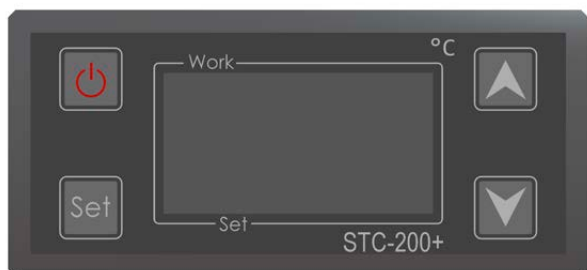

obrázek 1B



## Zobrazení údaje o požadované hodnotě:

1. Krátce stiskněte tlačítko SET a na displeji se zobrazí požadovaná hodnota.
2. Pro návrat k aktuální teplotě opět krátce stiskněte SET nebo počkejte 5 s.

## Změna požadované hodnoty:

1. Podržte tlačítko SET déle než 2 s.
2. Zobrazí se údaj žádané hodnoty a kontrolka °C začne blikat.
3. Nastavenou hodnotu lze měnit stiskem tlačítek ▼ nebo ▲ (do 10 s).
4. Nově nastavenou teplotu lze uložit opětovným stiskem tlačítka SET nebo automaticky po 10 s.

# USER SETTINGS

THERMOSTAT STC 200, Dixell XR20CX:

figure 1C

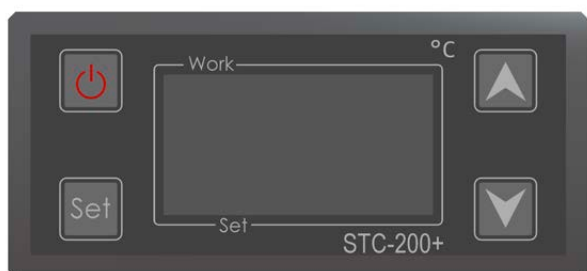


figure 1D



## Displaying Set Temperature:

1. Short-press the SET button. The display will show the set value.
2. To return the display to the current temperature, again short-press the SET button or wait 5s.

## Changing Set Temperature:

1. Hold the SET button for more than 2 s.
2. The set temperature will be displayed and the °C indicator will begin flashing.
3. The set temperature can be changed by pressing ▼ or ▲ (within 10 s).
4. The newly set temperature can be saved by pressing the SET button again or automatically by waiting 10 s.